

## SELECTING A PRE-STORED RECIPE



The oven offers 44 factory-set pre-stored recipes.  
Press the Program button **(4)** to access the recipe archive:



- The Display **(6)** will show “MAN” to indicate that the selected program is manual.



- The Display **(8)** will show “C 1” blinking to indicate that the first cycle has been selected.

To select, turn the dial **(7)** to the desired recipe:



- The Display **(6)** will show the selected recipe number (for example, “L05”).

Press the Start/Stop button **(15)** to start cooking immediately or wait 5 seconds and start cooking later.



## STARTING COOKING

After selecting a cooking mode, press the Start/Stop button **(15)**; cooking starts and the Start/Stop LED **(15)** will stay on.



The Display **(6)** will show:

- the oven temperature if manual cooking has been selected.
- alternatively, the oven temperature for 5 seconds and the selected program for one second if a cooking program has been selected.



The Display **(8)** will alternately show:

- the remaining cooking cycle time, if a time cycle has been selected, for 5 seconds.
- the probe temperature, if a core probe cycle has been selected, for 5 seconds.
- the current cycle for one second.



Pressing the Start/Stop button **(15)** stops the cycle momentarily and the Start/Stop LED **(15)** will blink; on pressing the button again, the cycle will restart from where it had stopped.



Pressing the Start/Stop button **(15)** for 5 seconds will end the cycle and the oven will present the last selection made.

It is possible to modify the set cycle even during cooking: it is possible to change the type of cooking, oven temperature core probe temperature and time. It is possible to modify the humidity only by stopping cooking or if it is not 0%.

During a cycle in progress it is permissible to pass from core probe cooking to time cooking and vice versa.

NB: Switching the oven off and on with the On/Off button **(1)** will reset all the settings.

## PRE-STORED RECIPES

### - TIMED RECIPES

#### First courses

- L01** Crepes/Cannelloni
- L02** Lasagne/Aubergine Parmigiana
- L03** Roman gnocchi
- L04** Steamed rice

#### Meats

- L05** Pork or veal shin
- L06** Goulash/Ossobuco/Lamb stew

#### Fish

- L07** Baked fish
- L08** Fish au gratin
- L09** Steamed fish

#### Vegetables

- L10** Baked vegetables
- L11** Roast potatoes
- L12** Steamed vegetables
- L13** Vegetables au gratin

#### Poultry

- L14** Chicken up to 1.5 kg
- L15** Roast chicken pieces
- L16** Chicken and rabbit stew

#### Multigrill

- L17** Grilled meat
- L18** Grilled fish
- L19** Grilled vegetables
- L20** Fried food
- L21** Medium sized kebabs
- L22** Pizza in slices
- L23** Small omelettes

### Confectionery and Bakery products

- L24** Sponge cake/Shortcrust pastry/Tarts
- L25** Fresh bread
- L26** Frozen bread
- L27** Croissants/Pain au chocolat/Muffins
- L28** Puff pastry/Strudel/Vol au vents
- L29** Creme caramel/Bouquet

### Regeneration

- L30** Regenerating plated foods
- L31** Regenerating trays

### - RECIPES WITH CORE PROBE

#### First courses

- L32** Lasagne/Aubergine Parmigiana

#### Meats

- L33** Traditional roasts
- L34** Slow cook traditional roasts
- L35** Roast-beef and whole fillets
- L36** Braised meat and pot roasts

#### Fish

- L37** Baked fish
- L38** Large baked fish
- L39** Steamed fish

#### Poultry


- L40** “Speedy” chicken up to 1.5 kg
- L41** “Speedy” chicken over 1.5 kg
- L42** Whole turkey/goose

### Regeneration

- L43** Regenerating plated foods
- L44** Regenerating trays

**N.B.:** Recipes with core probe are only displayed if the oven is actually equipped with a core probe.

## QUICK GUIDE - VERSION P

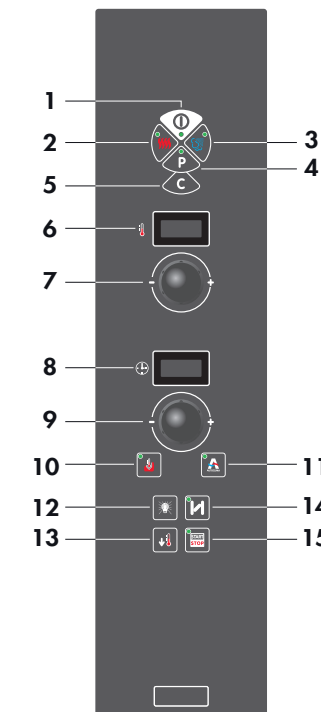

**1** - Main switch

**2** - Convection mode button

**3** - Steam mode button

**4** - Cooking program/recipes button

**5** - Cooking cycle button

**6** - Oven chamber temperature display, program/recipe number display

**7** - Temperature setting/selection knob

**8** - Display with cooking time (remaining/set), product core temperature display (real/set), steam display, cooking cycle display

**9** - Knob for setting/selecting Time/Core Temperature

**10** - Button for cooking with probe at the core of the food

**11** - Button for automatic humidity (Autoclima), Manual humidity button

**12** - Oven light button

**13** - Button for rapid cooling with door open

**14** - Button for oven steam vent

**15** - Start/Stop button

LA90024910rev01

## SETTING A MANUAL COOKING MODE



To select a cooking mode press the button for the required type of cooking (the corresponding LED stays on steady).

For the mixed mode press the Convection **(2)** and Steam **(3)** buttons together, both LEDs will stay on with a steady light.



- On the Display **(6)** the standard set cooking temperature blinks. This setting can be changed by turning the knob **(7)** and it will remain in memory until the user changes it again.



- A time cycle is set as standard; the Display **(8)** will show “INF” blinking that represents an Infinite time, the cycle cooking time can be changed by turning the knob **(9)** and this will remain in memory until the user changes it again.



- To select cooking with the core probe, press the Core Probe button **(10)** and the associated LED will light up.

The Display **(8)** will show the standard set core probe cooking temperature blinking.

This setting can be changed by turning the knob **(9)** and it will remain in memory until the user changes it again.

- Pressing the Core Probe button **(10)** again and passing from selection of a time cycle to a core probe cycle will cancel the previous settings and, in the case of a time cycle, the new time setting will be 0 min.



- Pressing the Autoclima button **(11)** will light up the associated LED, the Display **(8)** will show the standard set humidity blinking. This setting can be changed by turning the knob **(9)** and it will remain in memory until the user changes it again. The Humidity setting for steam cooking is preset and therefore cannot be changed.

It is possible to convert one cooking mode (for example Convection) into another mode (for example Mixed) when setting the adjustments.

The oven automatically exits selection of a cooking cycle after 5 seconds of no operation.

NB: Switching the oven off and on with the On/Off button **(1)** will reset all the settings.

## SETTING COOKING CYCLES



After selecting a cooking mode the user can set additional cooking cycles (up to at most 9) by pressing the Cycles button **(5)**.



- The Display **(6)** will show “MAN” to indicate that the selected program is manual.



- The Display **(8)** will show “C 2” blinking to indicate that the second cycle has been selected.

Select a cooking mode by pressing the button for the desired type of cooking, set the parameters for the new cooking cycle (see previous chapter).



To add a new cooking cycle press the Cycles button **(5)** and repeat the above-described operations. Each cooking program can have at most nine cycles.

The oven automatically exits selection of a cooking cycle after 5 seconds of no operation.

NB: Switching the oven off and on with the On/Off button **(1)** will reset all the settings.

## SAVING A COOKING PROGRAM



It is possible to save up to 99 cooking programs; press the Programming button **(4)** to access program selection:



- The Display **(6)** will show “MAN” to indicate that the selected program is manual.



- The Display **(8)** will show “C 1” blinking to indicate that the first cycle has been selected.

By turning knob **(7)** it is possible to access the other programs.

If the program is empty or has not been saved, the convection and steam LEDs will blink, whereas if it has already been saved the LEDs will be on according to the first selected cooking cycle.



Select an empty program (convection and steam LEDs blinking).

Set a cooking mode and customize the parameters as described in the previous chapter “Setting a manual cooking mode”.



Set additional cooking cycles, if desired, as described in the chapter “Setting cooking cycles”.



After programming the cycles it is possible to save the program permanently by pressing the Cycles button **(5)** or pressing the Start/Stop button **(15)** activating cooking immediately.

The oven automatically exits programming after 5 seconds of no operation and the program is automatically saved.

NB: When selecting the cycles of a program, if the program number is changed by moving the Temp Encoder **(7)**, the previous settings will be lost (unless the Program is saved beforehand).

NB: It is possible to modify any user program even if already saved beforehand.

## SELECTING A COOKING PROGRAM



It is possible to call up to 99 user cooking programs saved beforehand by the user. Press the Programming button **(4)** to access program selection:



- The Display **(6)** will show “MAN” to indicate that the selected program is manual.



- The Display **(8)** will show “C 1” blinking to indicate that the first cycle has been selected.

To select a Program turn the knob **(7)** onto the required program:



- The Display **(6)** will show the selected program number (for example, “P42”).

If the program is empty or has not been saved, the convection and steam LEDs will blink, whereas if it has already been saved the LEDs will be on according to the first selected cooking cycle.



Press the Start/Stop button **(15)** to start cooking immediately or wait 5 seconds and start cooking later.

## DELETING A COOKING PROGRAM



After calling up one of the 99 cooking programs, it is possible to delete it by holding down the Cooling **(13)** and Light **(12)** buttons for three seconds.