

**COMBINATION OVEN
WITH DIRECT STEAM AND
WITH STEAM GENERATOR**

VERSION P

EN

WASHING KIT - KE

Technical service



GENERAL INFORMATION

The appliance equipped with the washing kit permits activating two oven cleaning cycles: **SOFT CLEAN “SC” - HARD CLEAN “HC”**, without any direct action being taken by the operator during cleaning.

The detergent is evenly distributed through the special nozzle at the right time, avoiding any risk of contact with the operator.

Using detergents other than the one recommended by the manufacturer is advised against because it might not ensure good cleaning and could damage the integrity of the washing system.

Make sure that the quick-fit coupling for the detergent is properly inserted and the tank is supplied with enough of the detergent recommended by the manufacturer.

Activate automatic cooling with key **13** if the oven is very hot.

SOFT CLEAN

Turning on the SOFT CLEAN “SC” oven cleaning cycle to remove day-to-day dirt:

Press key **4**, display **6** will blink “**MAN**”, turn the knob **7** to the right until “**SC**” appears.

Press key **15** to turn on the **SOFT** wash program described below:

Cycle 1 cooling/preheating: the display shows “**rAF**” if the oven temperature is high, “**Att**” if the oven temperature is too low.

The **SOFT CLEAN “SC”** program is an automatic sequence of 7 cycles (working time and remaining time to the end of the program are visualized on display **8**), to provide the best combined action of cleansing (cycle 2-3), steam spraying (cycle 4), rinsing alternated with the steam cycle (cycle 5), end rinsing combined with ventilation (cycle 6) and drying (cycle 7) to make the inside of the oven dry and shiny.

If considerable deposits form on the drain filter in the middle of the bottom of the cavity, clean so as to ensure water and detergent flow out freely.

The end of the SOFT clean program is defined by a cyclical audible warning.

HARD WASH

Turning on the HARD CLEAN “HC” oven cleaning cycle to remove TOUGH dirt:

Press key 4, display 6 will blink “MAN”, turn the knob 7 to the right until “HC” appears.

Press key 15 to turn on the HARD clean program described below:

Cycle 1 cooling/preheating: the display shows “rAF” if the oven temperature is high, or “Att” if the oven temperature is too low.

The HARD CLEAN “HC” program is an automatic sequence of 12 cycles (working time and remaining time to the end of the program are visualized on display 8), to provide the best combined action of cleansing (cycle 2-3-7-8), steam spraying (cycle 4-9), rinsing alternated with the steam cycle (cycle 5-10), end rinsing combined with ventilation (cycle 11) and drying (cycle 6-12) to make the inside of the oven dry and shiny.

If considerable deposits form on the drain filter in the middle of the bottom of the cavity, clean so as to ensure water and detergent flow out freely.

The end of the HARD clean program is defined by a cyclical audible warning.

WARNINGS

Switching off the appliance with key 1 is not permitted during operation of the SOFT CLEAN and HARD CLEAN programs; wait for the end of washing signal, to be able to switch off the appliance.

Wipe the front seal of the oven with a sponge or cloth to prevent it from deteriorating too soon.

Stop and shut off all utilities (electrical power supply, water, and gas if connected). Leave the door slightly ajar when the appliance is not in use.


The manufacturer accepts no liability for any inaccuracies in this manual attributable to printing or copying errors. We reserve the right to modify our products as we deem fit, without impairing their basic features.

The reproduction or copying of any part of this manual by any means whatsoever is strictly forbidden unless authorized previously in writing by the manufacturer.

10.10.2008

DESCRIPTION OF DISPLAY AND KEYS

VERSION P

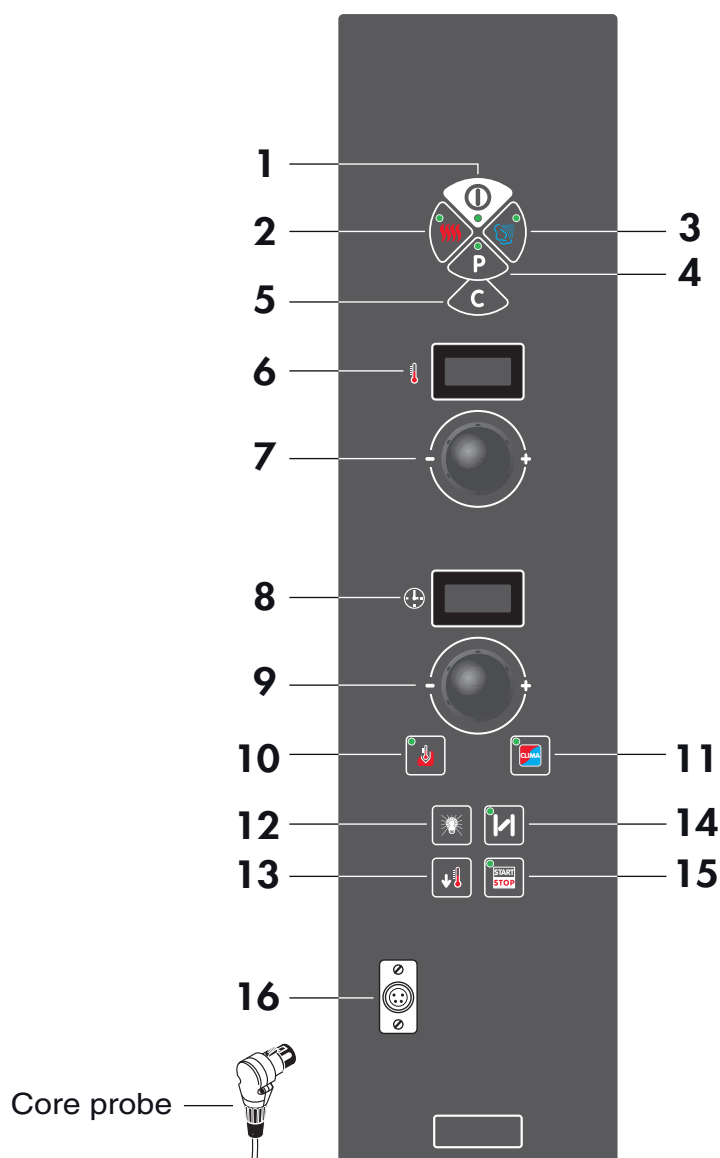

- 1 - Main switch
- 2 - Convection mode button.
- 3 - Steam mode button
- 4 - Cooking program button
- 5 - Cooking cycle button
- 6 - Display with oven temperature, program display
- 7 - Temperature setting/selection knob
- 8 - Display with cooking time (remaining/set), product core temperature display (real/set), humidity display, cooking cycle display
- 9 - Knob for setting/selecting Time/Core Temperature
- 10 - Button for cooking with core temperature probe
- 11 - Button for automatic humidity (CLIMA), Manual humidifier button
- 12 - Oven lights key
- 13 - Button for fast cooling with door open
- 14 - Button for cavity vent
- 15 - Start/Stop button
- 16 - Core temperature probe connection