

**COMBINATION OVEN  
WITH DIRECT STEAM AND  
WITH STEAM GENERATOR**

**VERSION T**

**EN**

**WASHING KIT - KE**

**Technical service**



## GENERAL INFORMATION

Appliances equipped with the washing kit permit activation of two oven cleaning cycles: **SOFT CLEAN** and **HARD CLEAN**, without any direct action by operator during cleaning.

The detergent is distributed evenly by the spray at the right time, avoiding any possibility of contact with the operator.

**Using detergents other than the one recommended by the manufacturer is not recommended as cleaning could be impaired and the washing system could get damaged.**

Make sure that the quick-fit coupling for the detergent is properly inserted and the tank is supplied with enough of the detergent recommended by the manufacturer.

Turn on automatic cooling with key **20** if the oven is very hot.

## SOFT CLEAN

**Turning on the “SOFT CLEAN” oven cleaning cycle to remove day-to-day dirt:**

Switch off the oven with key **1**.

Press key **16**, the display blinks “**MENU PLUS OFF - MANUAL CLEAN**”, turn the SCROLLER to the right to show “**SOFT CLEAN**”.

Press key **19** or press knob to turn on the **SOFT** clean program explained below.

**Cycle 1** cooling/preheating: the display shows “**COOL**” if the oven temperature is high, “**WAIT**” if the oven temperature is too “**LOW**”.

The **SOFT CLEAN** program is an automatic sequence of 7 cycles (working time and remaining time to the end of the program are visualized on display **7**), to provide the best combined action of cleansing (cycle 2-3), steam spraying (cycle 4), rinsing alternated with the steam cycle (cycle 5), end rinsing combined with ventilation (cycle 6) and drying (cycle 7) to make the inside of the oven dry and shiny.

If considerable deposits form on the drain filter in the middle of the bottom of the cavity, clean so as to ensure water and detergent flow out freely.

**The end of the SOFT clean program is defined by a cyclical audible warning. Open the door to turn it off.**

## HARD CLEAN

### Turning on the “HARD CLEAN” oven cleaning cycle to remove TOUGH dirt:

Switch off the oven with key 1.

Press key 16, the display blinks “MENU PLUS OFF - MANUAL CLEAN”, turn the SCROLLER to the right to show “HARD CLEAN”.

Press key 19 or press knob to turn on the HARD clean program explained below.

**Cycle 1** cooling/preheating: the display shows “COOL” if the oven temperature is high, “WAIT” if the oven temperature is too “LOW”.

The **HARD WASH** program is an automatic sequence of 12 cycles (working time and remaining time to the end of the program are visualized on display 7), to provide the best combined action of cleansing (cycle 2-3-6-7), steam spraying (cycle 4-8), rinsing alternated with the steam cycle (cycle 5-9), end rinsing combined with ventilation (cycle 10) and drying (cycle 11) to make the inside of the oven dry and shiny.

If considerable deposits form on the drain filter in the middle of the bottom of the cavity, clean so as to ensure water and detergent flow out freely.

**The end of the HARD clean program is defined by a cyclical audible warning. Open the door to turn it off.**

## WARNINGS

**Switching off the appliance with key 1 is not permitted during operation of the SOFT CLEAN and HARD CLEAN programs; wait for the end of washing signal to be able to switch off the appliance.**

Wipe the front seal of the oven with a sponge or cloth to prevent it from deteriorating too soon.

Stop and shut off all utilities (electrical power supply, water, and gas if connected). Leave the door slightly ajar when the appliance is not in use.

The manufacturer accepts no liability for any inaccuracies in this manual attributable to printing or copying errors. We reserve the right to modify our products as we deem fit, without impairing their basic features.

The reproduction or copying of any part of this manual by any means whatsoever is strictly forbidden unless authorized previously in writing by the manufacturer.

10.10.2008

# DESCRIPTION OF THE DISPLAYS AND KEYS

## DISPLAYS

## T VERSION

## KNOBS AND KEYS

