



**Scotsman**®

Ice Systems

**MAR SERIES**

**NEW DIGITAL  
TIMER SET UP**

The New Digital Timer is pre-adjusted in the factory in order to display: hh:mm.



To set up the working hours/minutes you must:

Provide power to the machine.

The Digital Timer starts to blink for one second and then it stops to 00:00 or to the last set up time (ex. 02:17)



Push the function button “fnc” once or twice till the red dot “cnt” is ON steady.



Push the “set” button once so to enter the setting mode.

On the display it appears “t1” and the red dot “cnt” starts to blink.



Push again the “set” button so to see the set up of the last working time (ex. 4 hrs & 18 min) with red dot still blinking.



Push the button “arrows up” or “arrows down” to set up the new working time (in hrs and minutes - countdown function).




Once the new working time is set up go back to the operating mode by pushing three times the function button “fnc”.



The new working time is now set up and stored into the Digital Timer. In few seconds the timer starts up the machine going on the start up procedure (immediate start up of drive motor/water pump and, 18' later, of compressor).

Once the working time elapses the Digital Timer switches OFF the machine with compressor first and 18' later the drive motor/water pump displaying 00:00 with the small red dot (out1) ON steady.

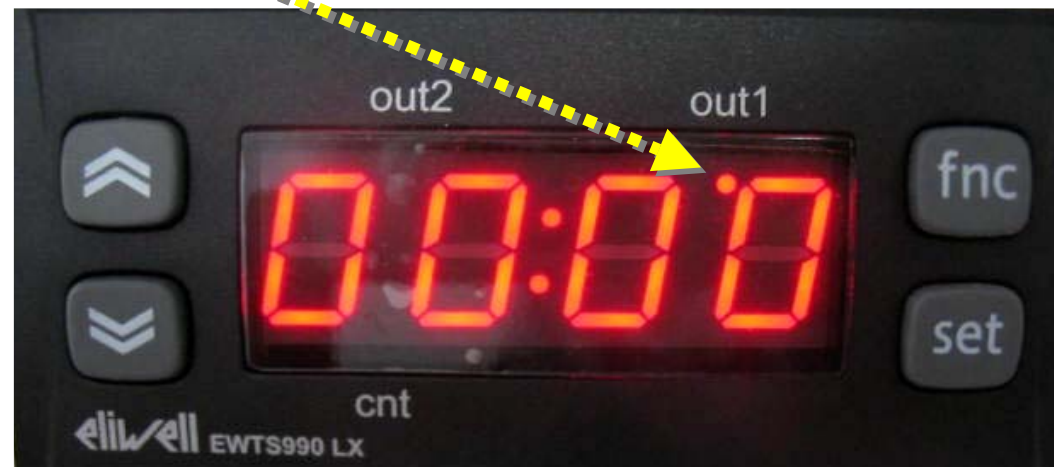

In case you need to re-start the machine w/out made any change on working time, push just the Function button “fnc” once.

The Digital Timer re-starts automatically the machine as per the last working time set up.

