

# AC 106-126-176 - ICE LEVEL CONTROL REPLACEMENT

REMOVE THE FRONT PANEL THEN, WITH A FLAT SCREWDRIVER, REMOVE THE TWO CORNER PROTECTION OF THE FRONT S.S. PLATE




USING THE SAME SCREWDRIVER, REMOVE THE FRONT S.S. PLATE SO TO...



...REACH THE ICE LEVEL CONTROL CABLE



DISCONNECT THE ICE LEVEL CONTROL PLUG (BLACK ONE WITH FOUR PINS) FROM THE PC BOARD THROUGH THE SIDE OPENING OF THE PLASTIC BOX

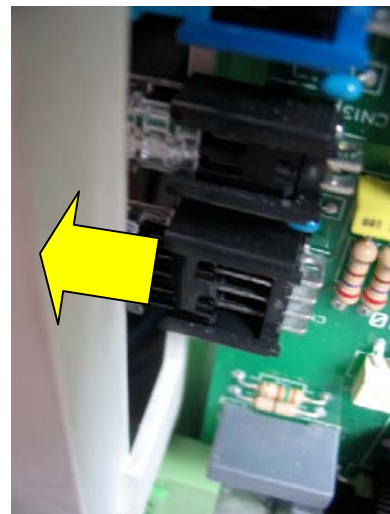


OPEN THE BIN DOOR THEN UNLOOSE THE TWO SCREWS OF THE ICE LEVEL CONTROL




TAKE THE ICE LEVEL CONTROL OUT PAYING ATTENTION OF THE...



...CABLE PLUG

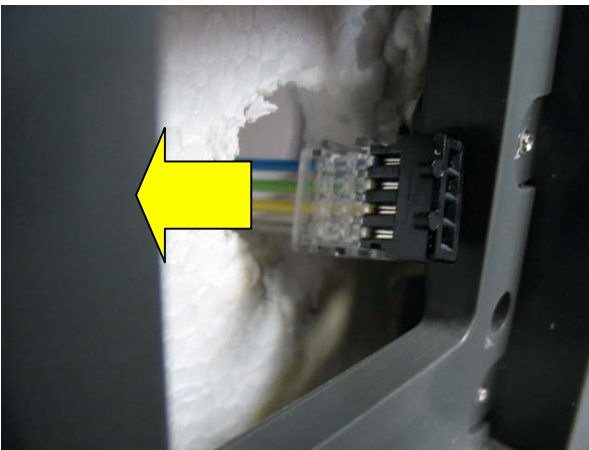

TO RE-INSTALL IT FOLLOW THE ABOVE PROCEDURE ON REVERSE PAYING ATTENTION TO DRIVE THE CABLE ON THE BACK SIDE OF THE BIN DOOR FRAME BOTTOM LINER TILL IT IS...

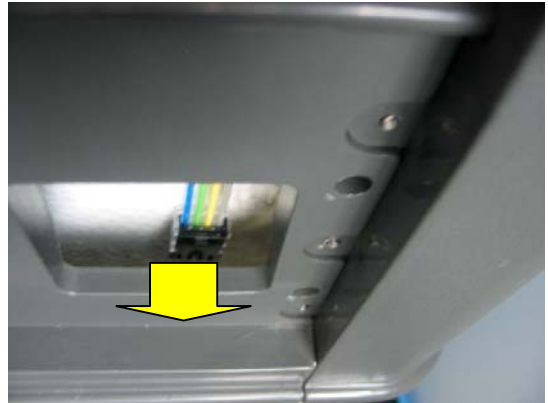

...OUT FROM THE BOTTOM OF THE FRONT METAL BRACKET

