

# AC 46-56-86 - BIN THERMOSTAT REPLACEMENT

REMOVE THE FRONT PANEL THEN, WITH A FLAT SCREWDRIVER, REMOVE THE TWO CORNER PROTECTIONS OF THE FRONT S.S. PLATE



USING THE SAME SCREWDRIVER, REMOVE THE FRONT S.S. PLATE SO TO...



...REACH THE BIN THERMOSTAT BULB AND ....



...GENTLE WITHDRAW IT FROM THE BULB HOLDER.



UNLOOSE SCREWS AND REMOVE THE CLEANING REMIND BOARD.




UNLOOSE SCREWS AND REMOVE THE RESET PUSH BUTTON AND SWITCH WITH ITS S.S. BRACKET




UNLOOSE SCREWS AND .....




.....MOVE DOWN THE FRONT METAL BRACKET

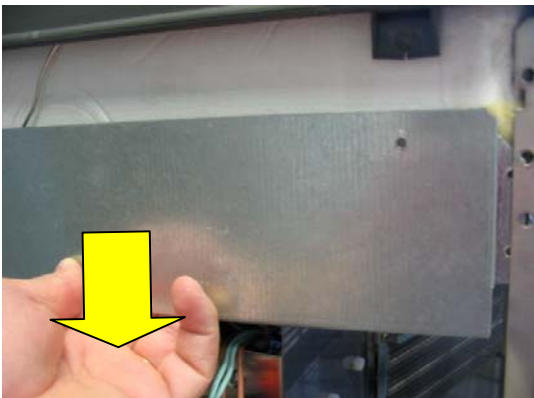


WITHDRAW THE BIN THERMOSTAT BULB FROM THE BACK OF THE BIN DOOR BOTTOM FRAME BY PULLING IT

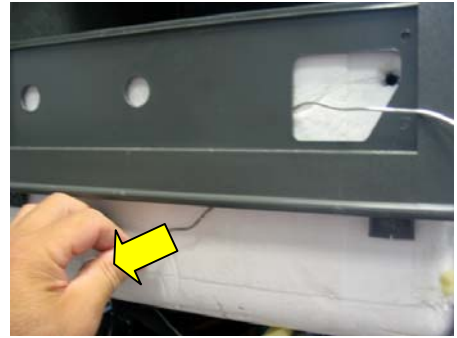

UNLOOSE HOLDING SCREWS AND REMOVE THE BIN TSTAT FROM CONTROL BOX THEN.....

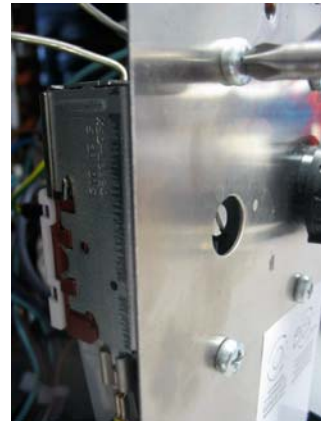

.....DISCONNECT THE THREE SPADE CONNECTORS

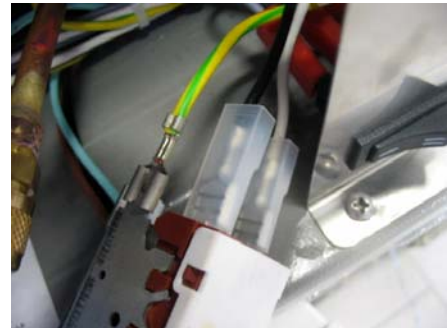

TO RE-INSTALL IT, FOLLOW THE ABOVE PROCEDURE ON REVERSE PAYING WHEN DRIVE THE BIN TSTAT BULB ON THE BACK OF THE BIN DOOR FRAME.

BEFORE INSERT IT INSIDE ITS BULB HOLDER WE RACCOMAND TO SHAPE THE LAST 15 CM LIKE A SNAKE (AS ON THE PHOTO) SO TO BE SURE TO HAVE SEVERAL CONTACT POINTS BETWEEN BIN THERMOSTAT BULB AND ITS BULB HOLDER

