

ACM 86-106-126-176 - BIN DOOR FRAME REPLACEMENT

REMOVE TOP PANEL THEN WITHDRAW BIN DOOR FROM THE UPPER SIDE OF MACHINE




UNLOOSE THE SCREWS AND SLIDE BACK THE UPPER SIDE OF THE BIN DOOR FRAME



UNLOOSE THE SCREWS SECURING THE BIN DOOR SLIDING GUIDES AS WELL AS THE SIDES OF THE BIN DOOR FRAME TO THE SIDE PANELS



GENTLY MOVE OUT ONE SIDE OF THE BIN DOOR FRAME SO TO REMOVE THE SLIDING GUIDE

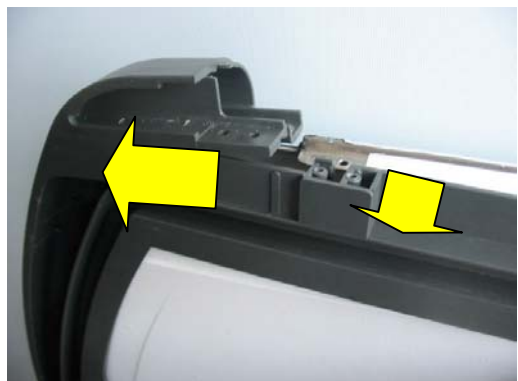




REMOVE FRONT PANEL THEN UNLOOSE THE SCREWS SECURING THE BOTTOM SIDE OF THE BIN DOOR FRAME TO THE UNIT FRONT BRACKET AND REMOVE THE BIN DOOR FRAME



ONCE REMOVED, REVERSE IT AND UNLOOSE THE SCREWS HOLDING THE TWO SIDES OF THE BIN DOOR FRAME TO THE BOTTOM ONE AND.....



....REMOVE THEM.

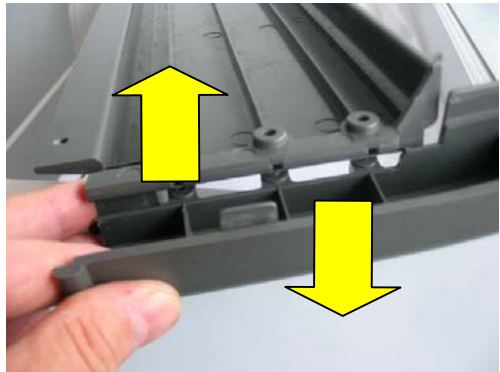

BIN DOOR FRAME CONSISTS OFF:

- UPPER LINER
- LOWER LINER
- RIGHT SIDE
- LEFT SIDE
- RIGHT SLIDING GUIDE
- LEFT SLIDING GUIDE



TO RE-INSTALL THE BIN DOOR FRAME FOLLOW THE ABOVE PROCEDURE ON REVERSE PAYING ATTENTION TO INSERT THE UNIT SIDE PANELS IN PROPER SLOT OF THE BIN DOOR FRAME PLASTIC SIDES

